

**VOILÉ-USA**


**TELEMARK BINDINGS**

www.voile-usa.com  
801-973-8622


**VOILÉ-USA**

**TELEMARK BINDINGS**


www.voile-usa.com  
801-973-8622

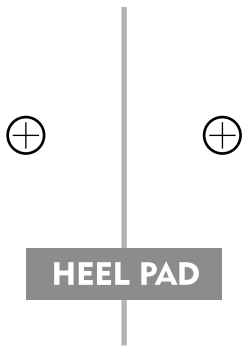

SEE MOUNTING  
INSTRUCTIONS FOR  
CORRECT HEEL PAD  
PLACEMENT

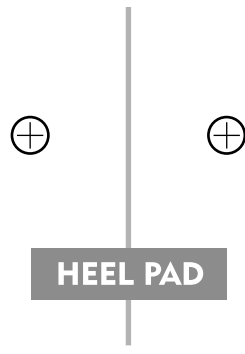

SEE MOUNTING  
INSTRUCTIONS FOR  
CORRECT HEEL PAD  
PLACEMENT

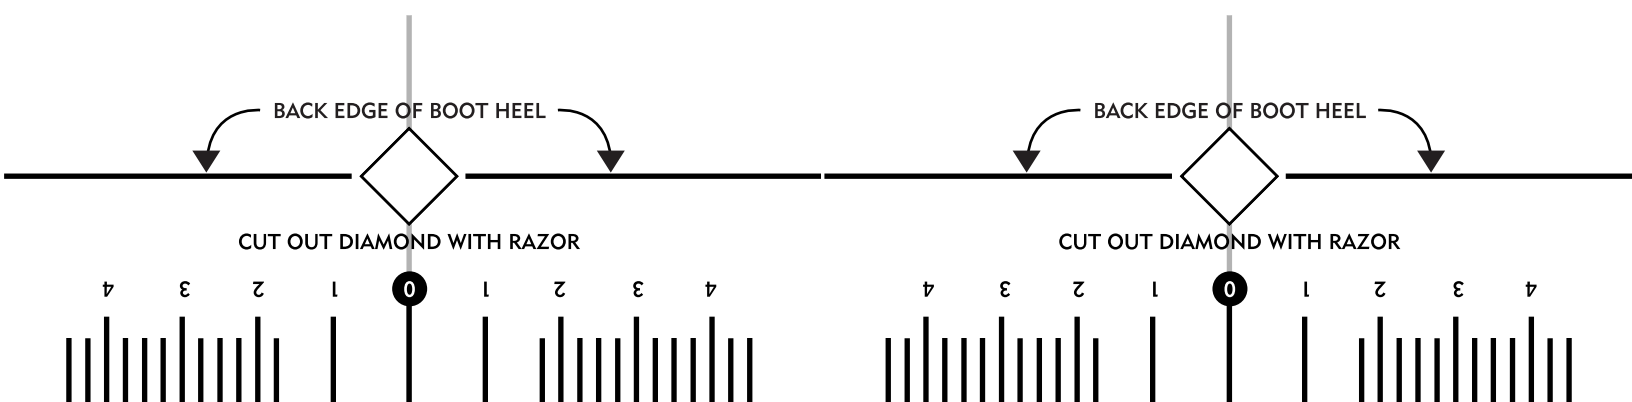

## **How To Use This Mounting Template**

- 1.) Following ski manufacturer guidelines, determine your 3-Pin Line position.
- 2.) With a razor knife cut-out the diamond shape for 3-Pin Line position.
- 3.) Align the diamond cut-out with mark on the ski. Make sure the template is centered on the ski, use tape to hold in place. Use a sharp pointed punch to mark the 4-hole pattern for the toe-piece riser.
- 4.) Before drilling, determine the Heel Pad position. First, measure the sole of your boot from the middle of the center 3-Pin hole to the back edge of the boot heel. Use that measurement to mark the distance from the 3-Pin Line position mark on the ski to the Heel Pad position.  
  
( Positioning the heel pad correctly will ensure the climbing wire to be centered under your boot heel and will also allow the heel lever assembly to be locked behind the heel pad for transport.)
- 5.) With a razor knife cut-out the diamond shape for Back Edge of Boot Heel position.
- 6.) Align the diamond cut-out with mark on the ski. Make sure the template is centered on the ski, use tape to hold in place. Use a sharp pointed punch to mark the 2-hole pattern for the heel pad.
- 7.) With all holes marked on each ski you can begin drilling. Please continue to follow binding mounting instructions.
- 8.) This guideline can be used for this paper template or when using the Voile Hardwire Mounting Jig. Mounting techniques vary, it is your responsibility to mount the binding correctly. Please contact Voile if you have questions. 801-973-8622 or [voile@voile-usa.com](mailto:voile@voile-usa.com).

## **How To Use This Mounting Template**

- 1.) Following ski manufacturer guidelines, determine your 3-Pin Line position.
- 2.) With a razor knife cut-out the diamond shape for 3-Pin Line position.
- 3.) Align the diamond cut-out with mark on the ski. Make sure the template is centered on the ski, use tape to hold in place. Use a sharp pointed punch to mark the 4-hole pattern for the toe-piece riser.
- 4.) Before drilling, determine the Heel Pad position. First, measure the sole of your boot from the middle of the center 3-Pin hole to the back edge of the boot heel. Use that measurement to mark the distance from the 3-Pin Line position mark on the ski to the Heel Pad position.  
  
( Positioning the heel pad correctly will ensure the climbing wire to be centered under your boot heel and will also allow the heel lever assembly to be locked behind the heel pad for transport.)
- 5.) With a razor knife cut-out the diamond shape for Back Edge of Boot Heel position.
- 6.) Align the diamond cut-out with mark on the ski. Make sure the template is centered on the ski, use tape to hold in place. Use a sharp pointed punch to mark the 2-hole pattern for the heel pad.
- 7.) With all holes marked on each ski you can begin drilling. Please continue to follow binding mounting instructions.
- 8.) This guideline can be used for this paper template or when using the Voile Hardwire Mounting Jig. Mounting techniques vary, it is your responsibility to mount the binding correctly. Please contact Voile if you have questions. 801-973-8622 or [voile@voile-usa.com](mailto:voile@voile-usa.com).