



A3 NTN mounting jig

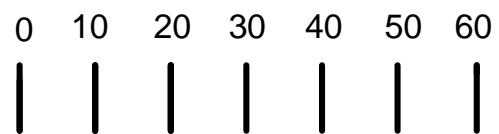

MM

Control scale

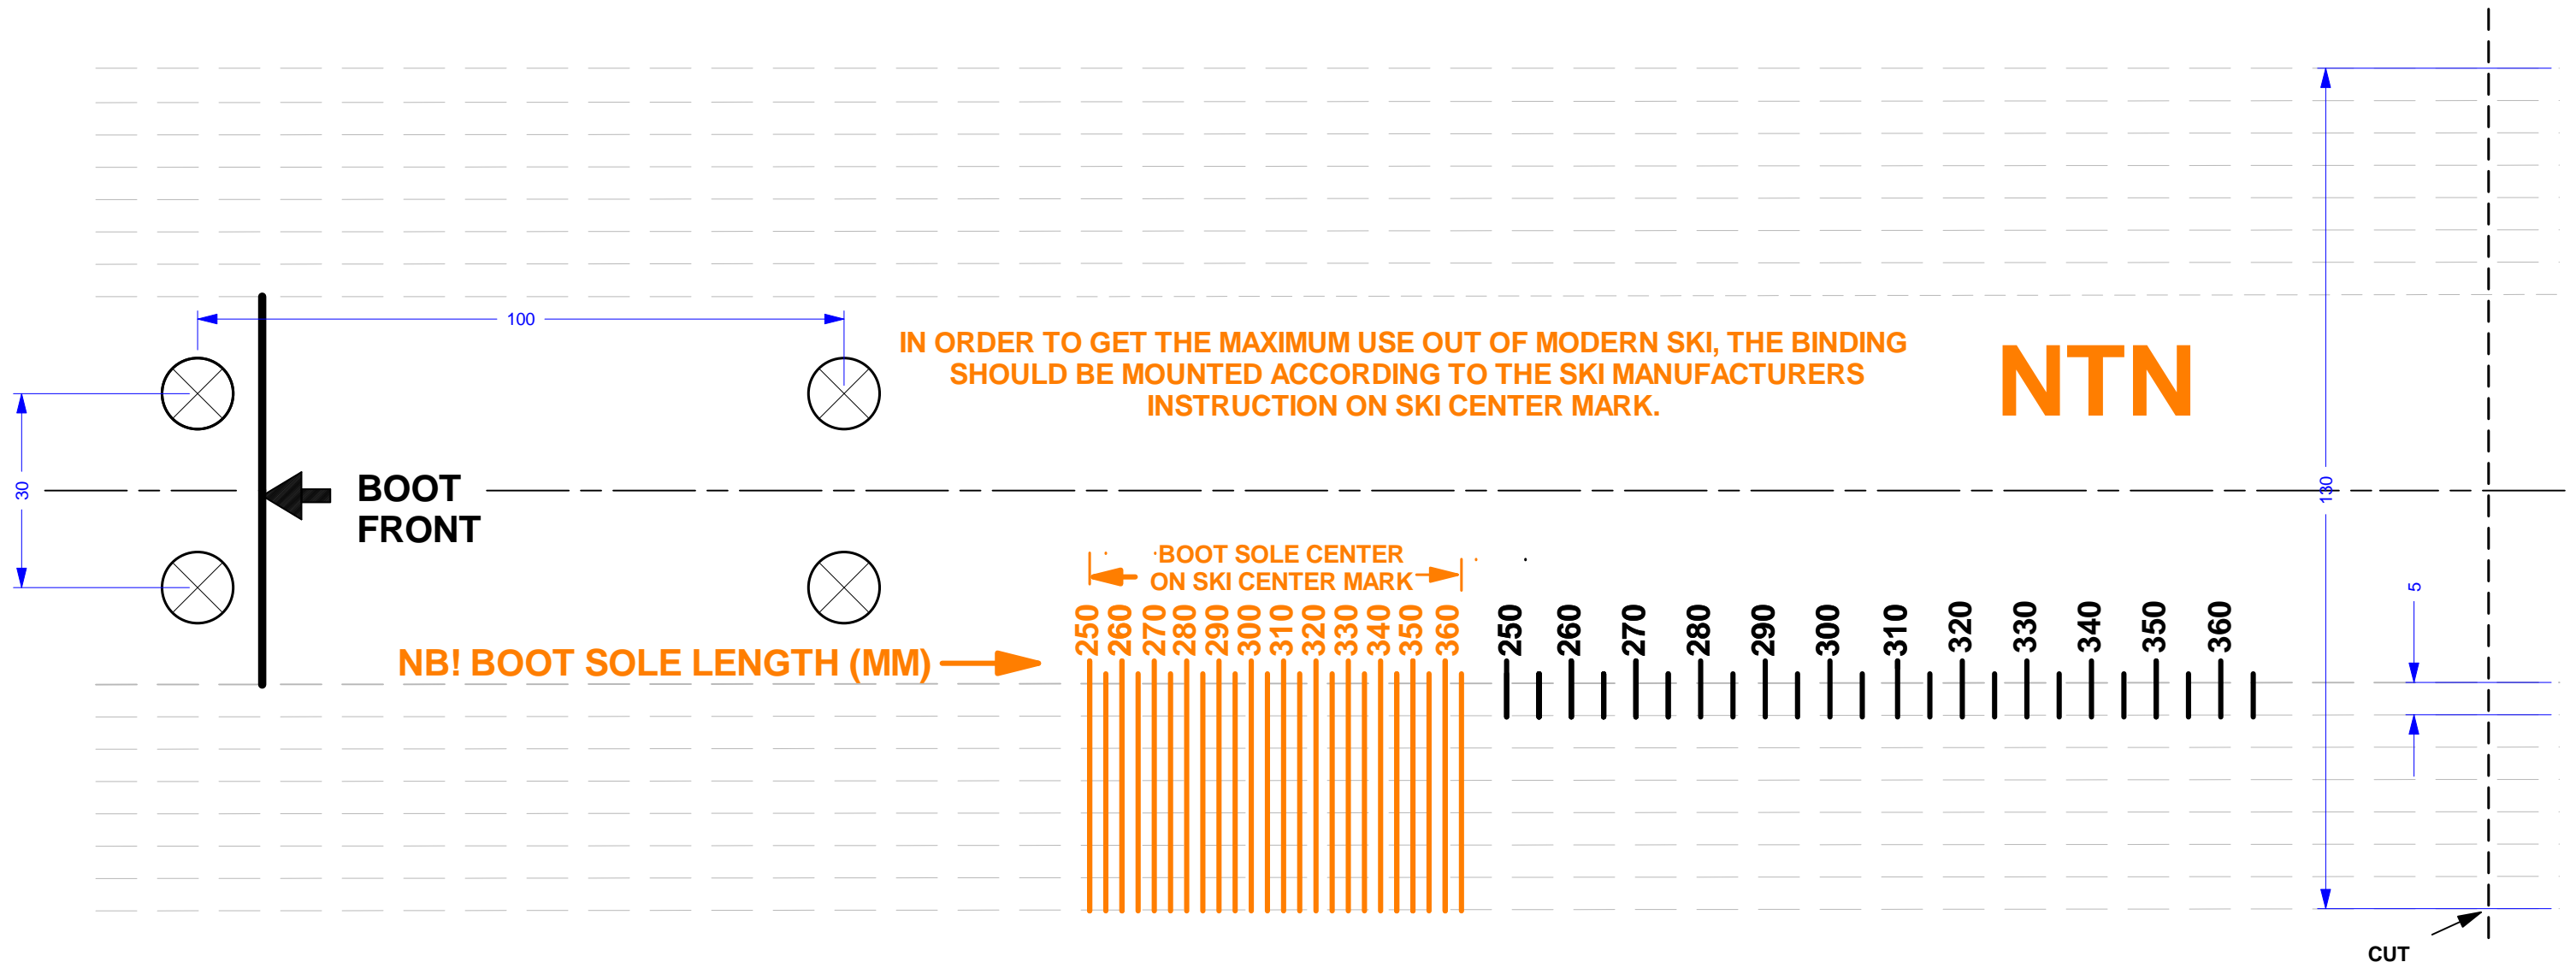

A3 NTN mounting jig

- 1. Cut off heel and "window" to the heel (selected clips), place the part 2 over right side of part 1 (see illustration 1).
- 2. Place the boot on top of the template. The tip and the heel should match the lines on the template (labeled tip of the boots/ heel of the boots).
- 3. Attach with tape part 2 on part 1 in this position (remember to place everything in center).
- 4. Read the number value in the "window" on the heel part (Boot sole length)
- 5. The template is placed on the ski so that the center mark on the ski matches the read value (point 4) on the red number scale. Remember to center the template on the ski.
- 6. Drill the hole (3.6 x9 mm drill) to the binding plate and the heel, remove the template and mount the binding according to mounting instructions.
- 7. Repeat point 5 and 6 on the next ski.

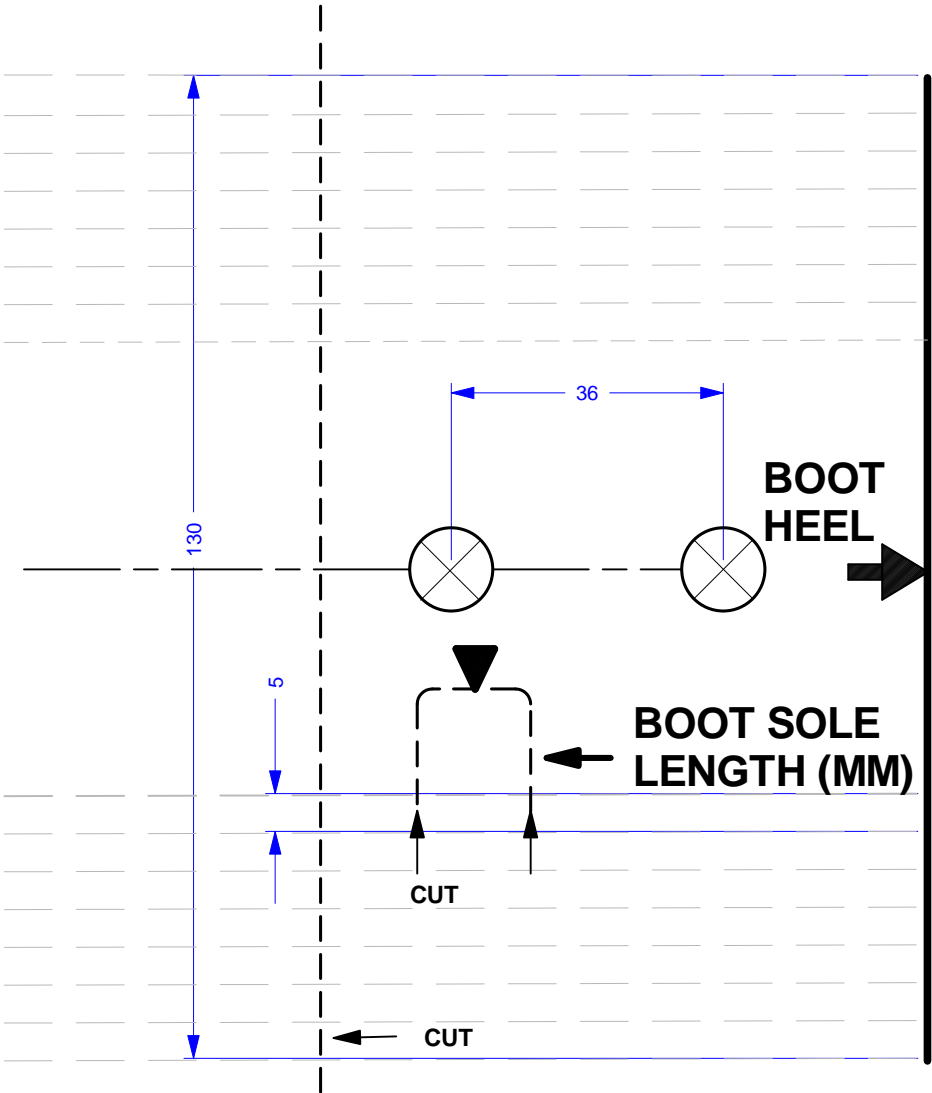


Illustration1

